 



Tools Required:

8mm Hex Wrench




In the Box:

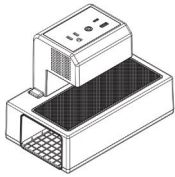


Clamp-On
Desktop Charging Station 8 mm Hex Wrench


Ships / Sold Separately:

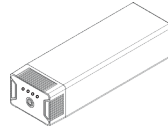


Rechargeable Battery

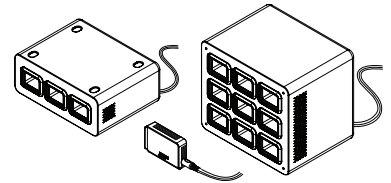

Battery Charger Options

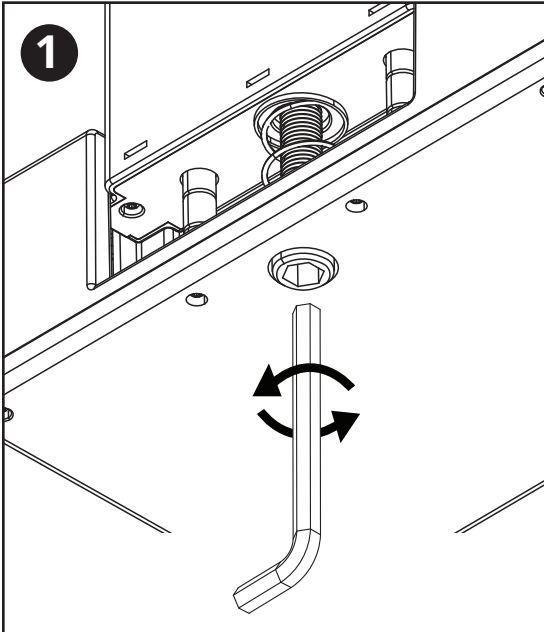


1
Open Clamp-On Desktop Station
clamp by loosening 8 mm bolt.

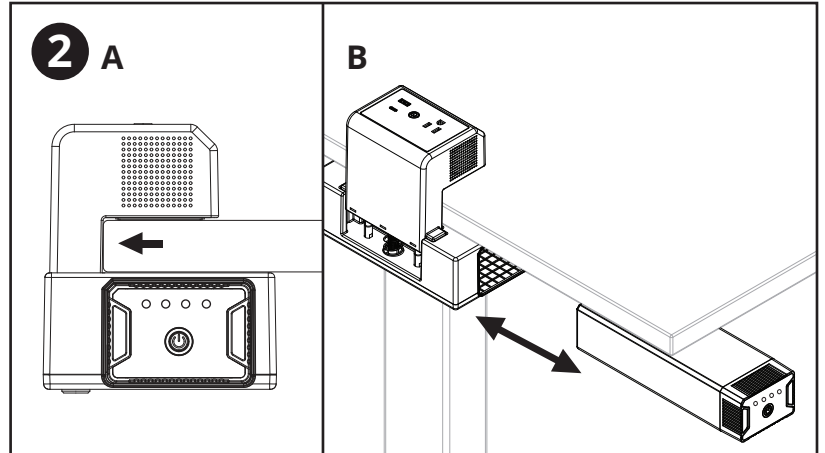


2 Test clamp fit by sliding clamp over edge of desk or table.


- Ensure outer edge of desk fully reaches inner edge of clamp.
- Ensure there is adequate clearance to insert and remove Rechargeable Battery.

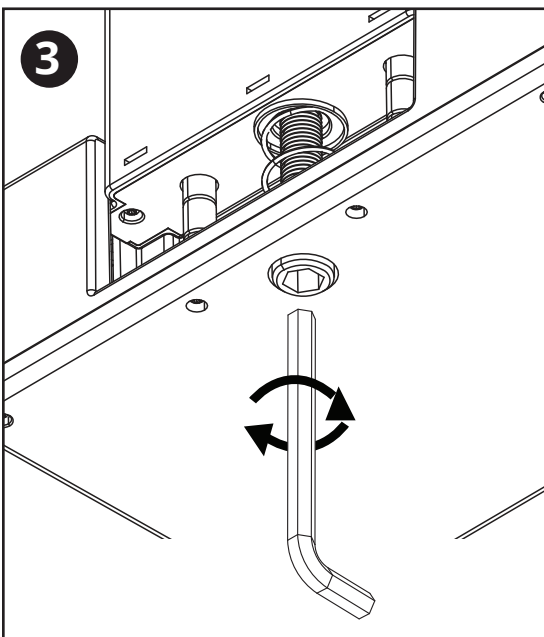


3
Tighten bolt until clamp fits snugly on desk.
IMPORTANT: Do not over-tighten bolt.

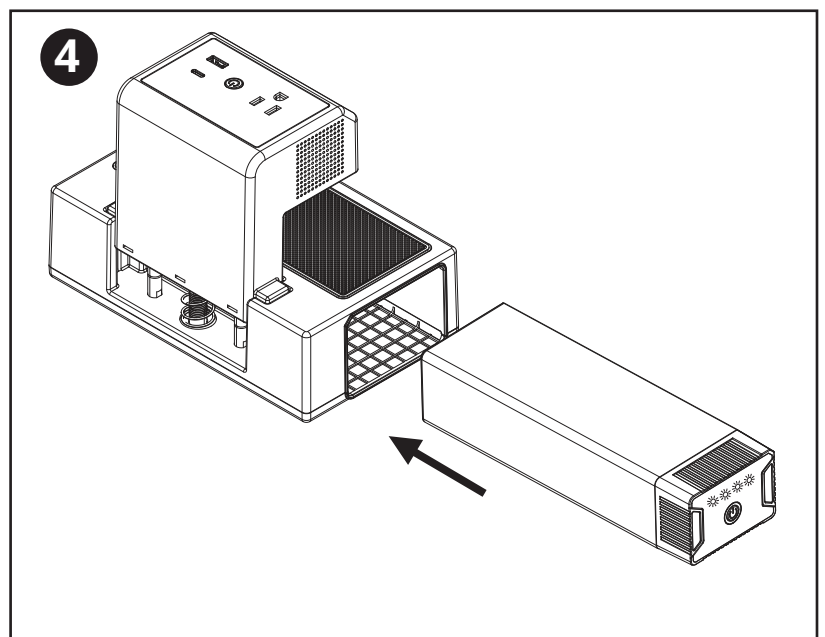

4
Insert Rechargeable Battery into Clamp-On Desktop Charging Station.
IMPORTANT: Battery must be fully charged before first use.

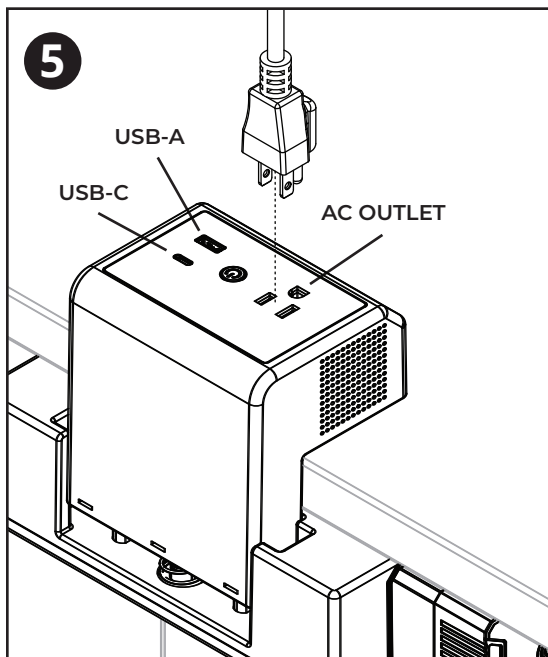


Plug devices into corresponding AC outlet and USB ports.

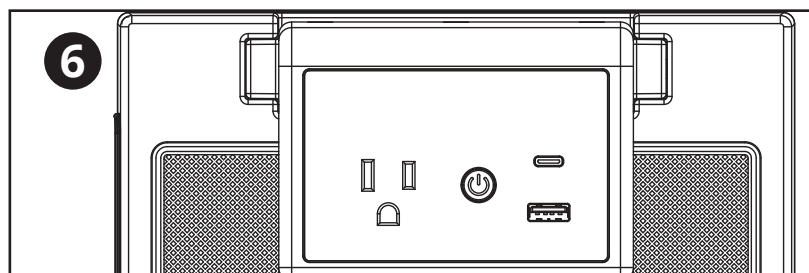

Press power button  on top of clamp to activate AC outlet and USB ports.

- Press for 2 seconds
- Turns off in 3 minutes if no power is drawn

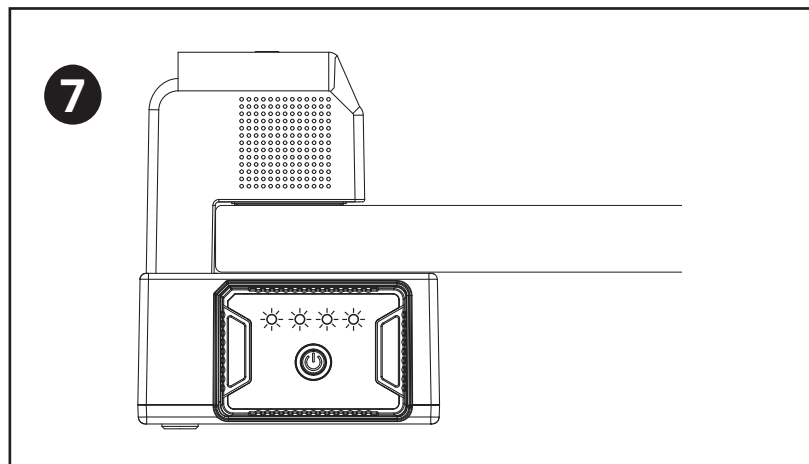

Press power button  on end of Rechargeable Battery to activate indicator lights and monitor power consumption.

- When only one LED is illuminated on Battery, replace with a fully-charged Battery from Battery Charger.

IMPORTANT: Plug a maximum of one device into each corresponding outlet/port. Do not use a splitter to plug multiple devices into one outlet and/or port, as this will damage the Rechargeable Battery and Clamp-On Desktop Charging Station.

TROUBLESHOOTING

Power Button Flashing Green*

1. Reset Clamp-On Desktop Charging Station by unplugging device(s) and pressing power button.
2. Plug device in again. If power button continues to flash, device is not compatible with EdgePower and should not be used.

*Indicates a safety feature has been triggered by a device.

Device Not Charging when Plugged into AC Outlet:

1. Confirm power button has been pressed and green light is on.
2. Check the Rechargeable Battery's indicator lights for power level.
3. Recharge Battery if one or fewer indicator lights are illuminated.

Device Not Charging when Plugged into USB Ports.

1. Check the Rechargeable Battery's indicator lights for power level.
2. Recharge Battery if one or fewer indicator lights are illuminated.

Model : KBEP-CGR

Modèle : KBEP-CGR

Input : 22.2VDC, 5.2A Max. (For battery pack)

Entrée : 22.2VDC, 5.2A Max. (Pour batterie)

AC Output: 110VAC, 60Hz 130W

DC Output: USB Output: 5VDC 2.4A (12 W Max.) (Support QC3.0)

Type-C Output: 5VDC 3A or 9VDC 2A or 12VDC 1.5A (18 W Max.) (Support PD)

USB and Type-C Total Output: 22W Max.

Sortie CA : 110VCA, 60Hz, 130W

DC Sortie : USB Sortie : 5VDC 2.4A or (12 W Max.) (Prise en charge QC3.0)

Type-C Sortie: 5VDC 3A or 9VDC 2A or 12VDC 1.5A (18 W Max.) (Soutien PD)

USB and Type-C Total Sortie: 22W Max.

Safety Instructions **Directives de sécurité**

1. Product maximum service temperature 104°F, suitable for use below 6,561 feet above sea level.
Température de fonctionnement maximale du produit 40°C, adaptée à une utilisation sous les 2000 mètres au-dessus du niveau de la mer.
 2. Candles and other open sources of fire shall not be placed on the product.
Les bougies et autres sources de feu ouvertes ne doivent pas entrer en contact avec le produit.
 3. If you want to clean the equipment, please use a dry cloth or dry brush to clean.
Si vous souhaitez nettoyer l'équipement, veuillez utiliser un chiffon sec ou une brosse sèche pour le nettoyer.
 4. For indoor use only. 
Pour utilisation à l'intérieur seulement.
 5. Class II equipment. 
Matériel de classe II.
 6. **Warning:** See instruction manual for use in countries other than the U.S.A. or equivalent.
-

Manufacturer: Dong Guan Techoss electronic technology Co., Ltd.

Fabricant: Dong Guan Techoss electronic technology Co., Ltd.

Made in China

Fabriqué en Chine

Note: This product should be used with battery pack model KBEP-BAT.