

LUXOR

30-Laptop/Tablet USB Type-C® Secure Charging Cart

LLTP30USBC



Charging Setup Instructions

Verify that the main power switch is in the OFF position and the cart is disconnected from all power sources.

Unlock and open the front door of the charging cart.

Place each laptop or tablet into an available slot between the divider fins.

Using USB Type-C® charging cables (not included), connect each cable to a USB Type-C port inside the cart.

Route the cables through the divider fins' integrated cable guides and connect them to the devices.

Ensure devices are securely positioned and cables are neatly managed.

Close and lock the front door.

Plug the cart's power cord into a properly grounded electrical outlet.

Turn the main power switch ON.

Charging Indicator Lights

Red: Device is charging

Green: Device is fully charged

Safety and Usage Guidelines

Always use the charging cart with a properly grounded electrical outlet.

For indoor use only. Do not expose the cart to rain, moisture, or standing water.

Disconnect power before cleaning or performing maintenance.

Do not pour liquids on or into the cart.

If the cart will not be used for an extended period, unplug it from the electrical outlet.

Repairs or internal servicing should only be performed by qualified service personnel.