



CHMCO05: 16-Bay USB Type-C® Open Charging Cart Assembly Instructions

PARTS LIST:



A x 1
Left Cart
Frame




B x 1
Right Cart
Frame




C x 1
Locking Stem
Caster



D x 1
Stem Caster



E x 1
Lower Shelf
Panel

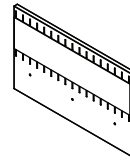


F x 1
Rear Shelf
Panel




G x 1
Left Panel
Gusset




H x 1
Right Panel
Gusset



I x 1
Lower Tray
Panel



J x 1
USB Type-C®
Power Strip




K x 1
Tray Front
Panel



L x 17
Device Divider



M x 16
USB Type-C®
Charging Cable



N x 1
Security
Bracket

HARDWARE:



O x 4
Cap Nut
M8



P x 4
Split Washer
M8



Q x 11
Large Frame Screw
1/4" x 15mm




R x 18
Small Frame Screw
M4 x 8mm



S x 32
Cable Clip


ASSEMBLY TOOLS:

Included:



T x 1
Small Allen Wrench

Not Included:




Phillips Head Screwdriver

ASSEMBLY INSTRUCTIONS:


1

Attach two Locking Stem Casters (**C**) and two Stem Casters (**D**) as shown to Left Cart Frame (**A**) and Right Cart Frame (**B**) using Cap Nut (**O**) and Split Washer (**P**).

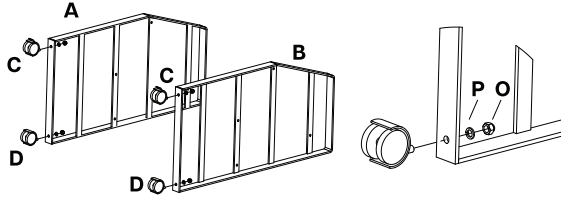


2

Construct a Shelf Assembly by connecting the Lower Shelf Panel (**E**) and the Rear Shelf Panel (**F**) using three Large Frame Screws (**Q**).

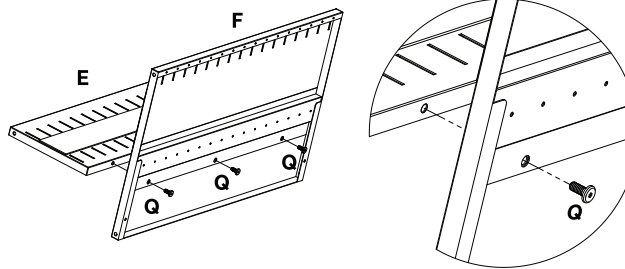


3

Attach the Left Cart Frame (**A**) to the Shelf Assembly using three Frame Screws (**Q**).

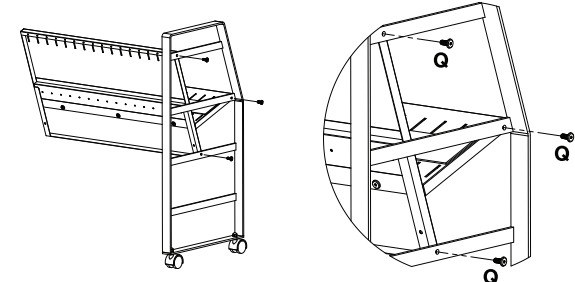


4

Attach the Right Cart Frame (**B**) to the Shelf Assembly using three Large Frame Screws (**Q**).

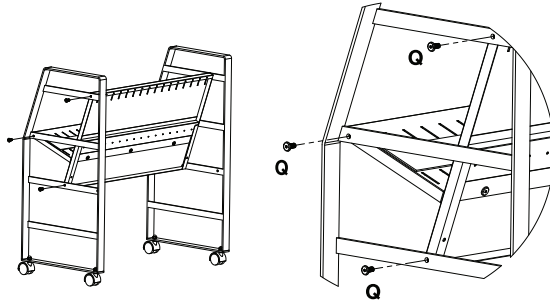


5

Attach the Left Panel Gusset (**G**) and the Right Panel Gusset (**H**) as shown using two Small Frame Screws (**R**).

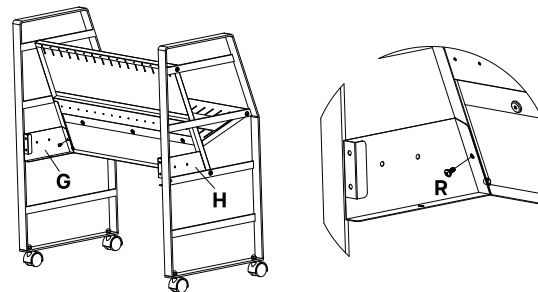

6


Attach the Lower Tray Panel (**I**) behind the Shelf Assembly using two Large Frame Screws (**Q**) and two Small Frame Screws (**R**).

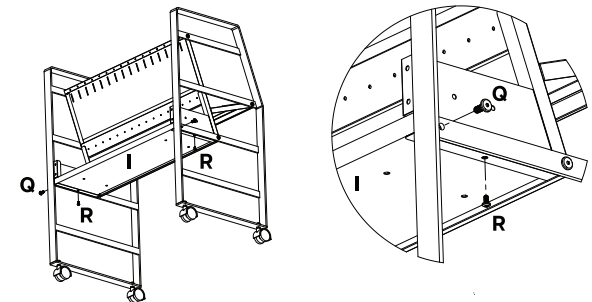


CHMC005: 16-Bay USB Type-C® Open Charging Cart Assembly Instructions

ASSEMBLY INSTRUCTIONS:


- 7** Attach the USB Type-C® Power Strip (**J**) to the Lower Tray Panel (**I**) as shown using four Small Frame Screws (**R**).

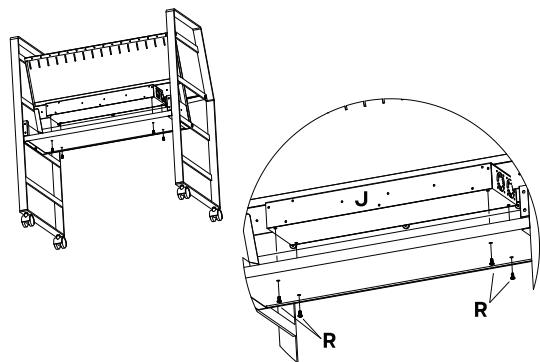


- 8** Attach the Tray Front Panel (**K**) using four Small Frame Screws (**R**).

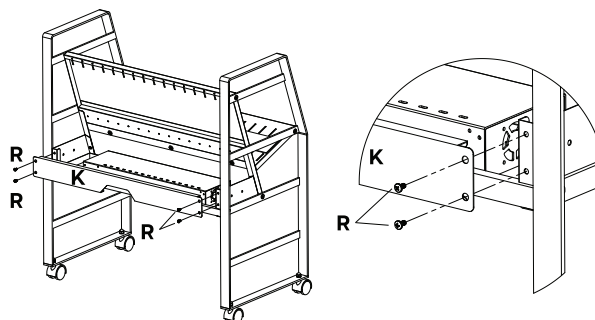


- 9** Insert 32 Cable Clips (**S**) into the holes on the back of the Rear Shelf Panel (**F**) as shown.

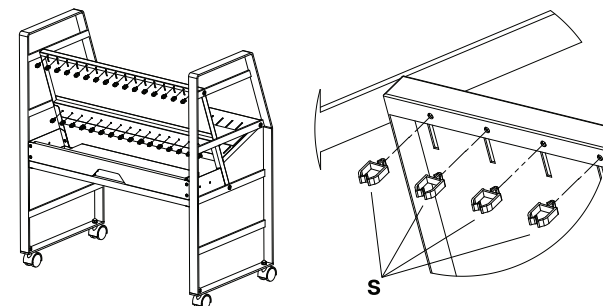

- 10** Insert a USB Type-C® Charging Cable (**M**) into the far left port on the USB Type-C® Power Strip (**J**). Route the cable through the left set of Cable Clips (**S**). Repeat the process for the remaining 15 USB Type-C® Cables (**M**).

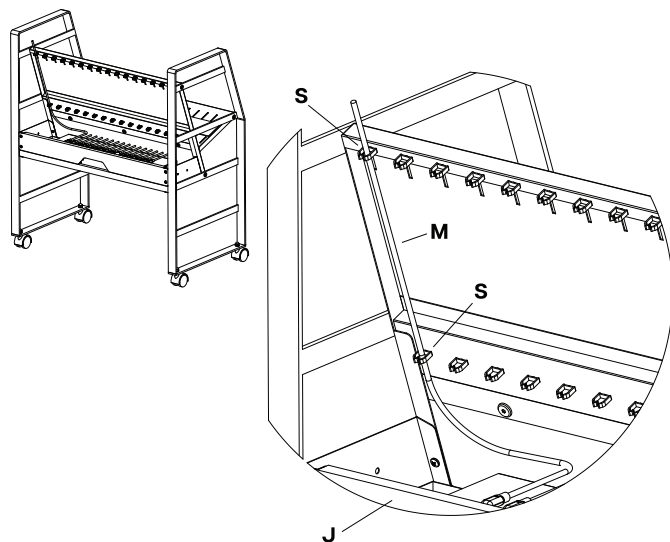

- 11** Attach the Security Bracket (**N**) as shown using four Small Frame Screws (**R**).

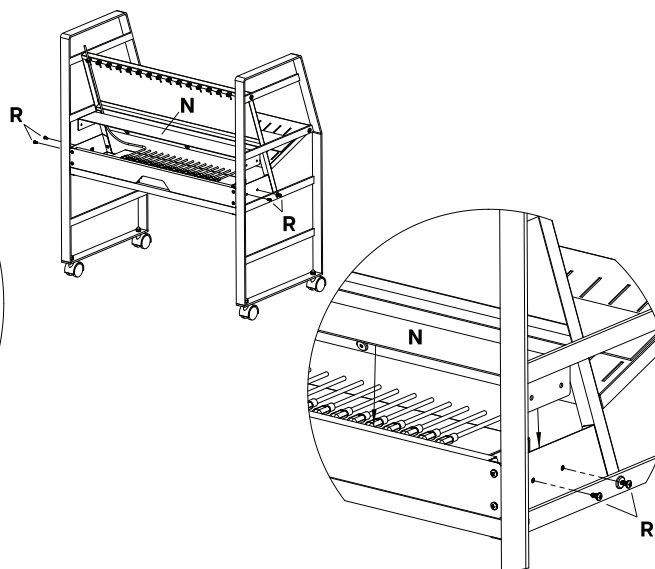

- 12** Insert 17 Device Dividers (**L**) into the slots on the Shelf Assembly as shown.

